3139 Reach Barrier Attic Ladder Kit Assembly Instructions

1 Unfold the Reach Barrier Reflective Air² material. This will cover the enclosed corrugated "box" forming the completed attic ladder insulation unit:

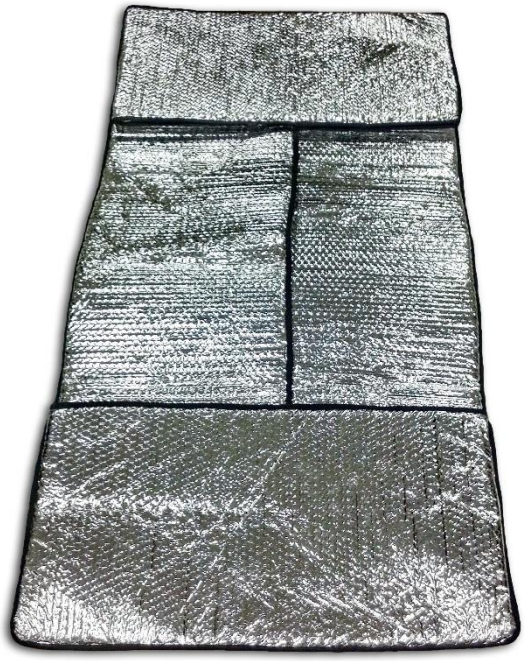

2 Open and unfold the corrugated box as shown below. Make sure the "V" Notches of the box are at the corners.

3 Fold the sides and ends of the box in/down as shown below, this will form the "box" for the Reach Barrier Reflective Air² material to cover – creating the insulator for your pull down attic ladder. Make sure the "V" Notches of the box are at the corners

4 When finished folding your Attic Ladder Box turn it upside down and lay it into the unfolded Reach Barrier Insulation Wrap – as shown below:

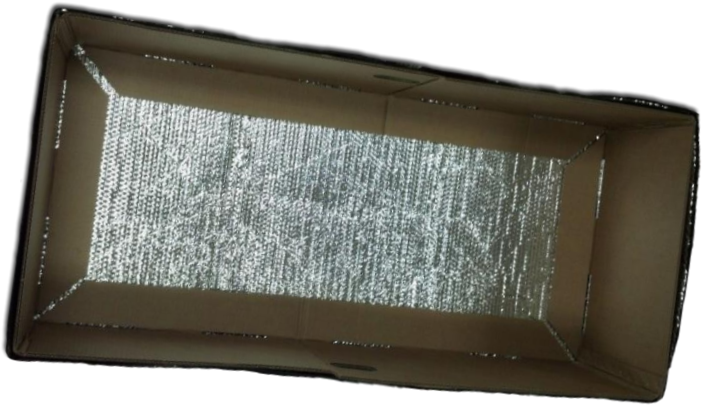

5 Turn the "assembled unit" over and place it in the attic directly above the opening of your pull down attic ladder:

REACH Barrier LLC. 860 N. Dorothy Dr., Suite 608 - Richardson, TX 75081 - 972-331-3933
www.reachbarrier.com - sales@reachbarrier.com